

# Pulse oximetry

Instructions for use HAMILTON-C3



282010, 10109010, 10109010BA

Software version 2.0.x 624832/02 | 2021-02-26





# Instructions for use Pulse oximetry

2021-02-26

624832/02

© 2021 Hamilton Medical AG. All rights reserved. Printed in Switzerland.

No part of this publication may be reproduced, stored in a database or retrieval system, or transmitted in any form or by any means, electronic, mechanical, or by photocopying, recording, or otherwise, without prior written permission of Hamilton Medical AG.

This document may be revised, replaced, or made obsolete by other documents by Hamilton Medical AG at any time and without notice. Ensure that you have the most current applicable version of this document; if in doubt, contact the technical support department of Hamilton Medical AG, Switzerland. While the information set forth herein is believed to be accurate, it is not a substitute for the exercise of professional judgment.

Nothing in this document shall limit or restrict in any way Hamilton Medical AG's right to revise or otherwise change or modify the equipment (including its software) described herein, without notice. In the absence of an express, written agreement to the contrary, Hamilton Medical AG has no obligation to furnish any such revisions, changes, or modifications to the owner or user of the equipment (including software) described herein.

The equipment must be operated, serviced, or upgraded only by trained professionals. Hamilton Medical AG's sole responsibility with respect to the equipment and its use is as stated in the limited warranty provided in the device *Operator's Manual*.

Hamilton Medical AG shall not be liable for any loss, cost, expense, inconvenience, or damage that may arise out of misuse of the product, or if non-Hamilton Medical AG parts were used when replacing parts, or if serial numbers were amended, deleted, or removed.

If returning parts to Hamilton Medical AG, be sure to use the standard Hamilton Medical returned goods authorization (RGA) procedure. Disposal of parts shall follow all local, state, and federal regulation with respect to environmental protection.

For all proprietary as well as third-party trademarks used by Hamilton Medical AG, see www.hamilton-medical.com/trademarks. Product and/or company names marked with a <sup>§</sup> symbol may be the trademarks and/or registered trademarks of their respective owners, including but not limited to Aerogen<sup>§</sup>, Nihon Kohden<sup>§</sup>, Masimo<sup>§</sup>, Masimo SET<sup>§</sup>, Masimo rainbow SET<sup>§</sup>, Capnostat<sup>§</sup>, Bluetooth<sup>§</sup>, and Wi-Fi<sup>§</sup>.

#### Manufacturer

Hamilton Medical AG Via Crusch 8, CH-7402 Bonaduz, Switzerland

Phone: (+41) 58 610 10 20 Fax: (+41) 58 610 00 20 info@hamilton-medical.com www.hamilton-medical.com

		Pre	face	7
Chapter	1	Saf	ety information	9
	1.1	Gen	eral safety information	10
	1.2	Puls	e oximetry measurements safety information	12
	1.3	Sens	sor safety information	14
Chapter	2	SpC	D2 monitoring	17
	2.1	Ove	rview	18
	2.1	.1	About the Nihon Kohden pulse oximeter	19
	2.1	.2	About the Masimo SET pulse oximeter	19
	2.2	Get	ting started	20
	2.3	Enal	bling SpO2 monitoring	20
	2.4	Con	necting the components	21
	2.4	.1	Connecting the Nihon Kohden pulse oximeter	21
	2.4	.2	Connecting the Masimo pulse oximeter	22
	2.5	Veri	fying sensor measurements on the ventilator	24
	2.5	.1	Reviewing the Masimo sensor and cable status	25
	2.6	Wor	king with alarms	25
	2.6	.1	Setting alarm limits	26
	2.6	.2	SpO2 alarm delay	26
	2.6	.3	Pulse-oximetry-related alarms	27
	2.7	Viev	ving pulse oximetry data	30
	2.7	.1	Monitored parameters	30
	2.7	.2	Viewing data in the Monitoring window	32
	2.7	.3	Viewing data on the main display	32
	2.7	.4	Viewing data in the Dynamic Lung panel	33
	2.7	.5	Reviewing the plethysmogram	33
	2.7	.6	Viewing data as trends	34
	2.8	Trou	ubleshooting	34
	2.9	Abo	ut the SpO2/FiO2 ratio	36

Chapter	3	Mainte	enance	37
	3.1	Safety in	nformation	38
	3.2	Cleaning	g the adapter and sensor	39
	3.3	Replacir	ng the adapter, cables, or sensor	39
	3.4	Disposir	ng of the adapter, cables, and sensor	39
Chapter	4	Specifi	cations: Nihon Kohden	41
	4.1	Paramet	ter specifications	42
	4.1	1 Ac	curacy of measurements	42
	4.2	Alarm s	pecifications	44
	4.3	Technica	al specifications	44
Chapter	5	Specifi	cations: Masimo SET	47
	5.1	Paramet	ter specifications	48
	5.1	1 Ac	curacy of measurements	48
	5.2	Alarm s	pecifications	52
	5.3	Technic	al specifications	53
Chapter	6	Config	juration	55
	6.1	Overvie	N	56
	6.2	Activati	ng the SpO2 hardware option	56
	6.3	Selectin	g the sensor type	56
	6.4	Configu	ring Nihon Kohden sensor settings	57
	6.5	Configu	ring Masimo SET sensor settings	59
	6.5	1 Sp	ecifying sensor settings in Configuration mode	59
	6.5		ecifying sensor settings during ventilation	
	6.5		out the Maximum Sensitivity mode setting	
	6.5		viewing configured options	
		Glossa	ry	63
		Index .		65

#### About this guide

When a supported pulse oximeter is connected to the device, the ventilator provides integrated monitoring and data display of functional oxygen saturation of arterial hemoglobin (SpO2) and related pulse oximetry data.

This guide provides information about the use and configuration of SpO2 sensors and data. It is designed for use together with your ventilator *Operator's Manual*, and refers to information provided therein.

#### Conventions used in this guide

In this manual:

- The SpO2 sensors and cables shown in this manual may not exactly match what you see in your environment.
- Button and tab names are shown in a bold font
- The notation XX > XX shows the sequence of buttons/tabs to touch to open the associated window.
  - For example, the text "Touch System > Settings" means touch the System button, then touch the Settings tab.
- Window names are shown using the sequence of buttons/tabs used to open them.
  - For example, "Alarms > Limits 2 window" means the window is accessed by touching the Alarms button, then the Limits 2 tab.
- Pressure is indicated in cmH2O, length in cm, and temperature in degrees Celsius (°C). 1 cmH2O equals 0.981 mbar, which equals 0.981 hPa.

- A green check mark or button
   xxx indicates a selected item or feature.
- The graphics shown in this manual may not exactly match what you see in your environment
- Some figures use callouts in a white circle with a blue border.
  - ① These figures may have an associated legend table, or may provide the legend in the figures title, if a single item. Callouts may be numeric or alphabetic. Callouts are *unrelated* to any nearby procedures and refer only to the figures themselves and their associated legend.
- Some figures use small dark blue callouts.
  - These callouts show the sequence of steps. Note that any numbering is *not* directly related to the numbering of any associated procedure.
- Not all features or products are available in all markets.
- Product description and order number may differ depending on region.
- Pulse oximeter technologies offered with this device are provided by Masimo and Nihon Kohden.
- The pulse oximeter is also referred to as a pulse *CO-oximeter/SpO2 adapter*, and the sensor is also referred to as a *probe*. The terms as used in this manual are synonymous.

- In general, warnings, cautions, and notes related to CO-oximetry are specific to Masimo technology only.
- Phrases referring to an SpO2 adapter are specific to the enclosure containing the optional oximetry or CO-oximetry solution that allows connection to either standard pulse oximetry sensors (Masimo or Nihon Kohden), or pulse CO-oximetry sensors (Masimo only).
- The Masimo rainbow SET option is only available with a Masimo SET<sup>§</sup> pulse oximeter.
- The PI and PVI monitored parameters are only available with a Masimo SET pulse oximeter.

Safety messages are displayed as follows:

# **↑** WARNING

Alerts the user to the possibility of injury, death, or other serious adverse reactions associated with the use or misuse of the device

# **↑** CAUTION

Alerts the user to the possibility of a problem with the device associated with its use or misuse, such as device malfunction, device failure, damage to the device, or damage to other property.

#### NOTICE

Emphasizes information of particular importance.

In tables, safety messages are indicated as follows:

**⚠** WARNING!

**⚠** CAUTION!

**1** NOTICE!

# 

# Safety information

1.1	General safety information	10
1.2	Pulse oximetry measurements safety information	12
1 3	Sensor safety information	14

# 1.1 General safety information

The pulse oximeter is to be operated by, or under the supervision of, qualified personnel only. Review the manual, accessories, directions for use, all precautionary information, and specifications before using the pulse oximetry system.

Safety information is organized by general area of application:

- General safety
- Safety related to pulse oximetry measurements
- Sensor safety
- Maintenance (see Chapter 3)

# **M** WARNING

- Explosion/Fire hazard. Never use the SpO2 adapter in a hyperbaric oxygen chamber. Failure to comply with this warning can cause explosion or fire.
- Explosion/Fire hazard. Never use the SpO2 adapter in the presence of any flammable anesthetics or other flammable substance in combination with air, oxygen-enriched environments, or nitrous oxide. Failure to comply with this warning can cause explosion or fire.
- The pulse oximeter is intended only as an adjunct device in patient assessment. Do not use it as the sole basis for diagnosis or therapy decisions. It must be used in conjunction with clinical signs and symptoms. Overall judgment must be made by a physician who understands the limitations and characteristics of the pulse oximeter and can read the biomedical signals acquired by other instruments.

- Additional ventilator-independent patient monitoring (bedside vital sign monitoring or arterial blood gas (ABG) measurement) must be used during automatic or guided ventilation.
   Check PaCO2 against displayed
   PetCO2 and SaO2 against displayed
   SpO2.
- Verify the compatibility of the adapter, sensor, and cables before use. Use of incompatible components can result in patient injury.
- Do not use the pulse oximeter if it appears, or is suspected to be, damaged.
- Do not place the SpO2 adapter or accessories in any position that might cause them to fall on the patient.
- Do not use the pulse oximeter unless the setup has been verified to be correct
- The pulse oximeter is *not* an apnea monitor.
- To ensure safety, avoid stacking multiple devices or placing anything on the instrument during operation.
- Only use the SpO2 adapter and SpO2 sensors that are listed as compatible with Hamilton Medical ventilators.
   The safety of the attachment section (including the SpO2 adapter and the sensor) depends on the specifications of the connected instrument.
   If the SpO2 adapter is used with an instrument or SpO2 sensor other than those specified, the patient and operator can get an electrical shock and the SpO2 adapter can become hot.
- SpO2 is empirically calibrated in healthy adult volunteers with normal levels of carboxyhemoglobin (COHb) and methemoglobin (MetHb).

- To ensure patient electrical isolation, connect only to other equipment with electrically isolated circuits.
- Do *not* use the pulse oximeter during magnetic resonance imaging (MRI) scanning or in an MR environment.
- Do not use SpO2 measurement and PEEP/Oxygen adjustment with patients suffering from carbon monoxide intoxication.
- Do not permit the operation of mobile phones, small wireless devices and other devices that produce strong electromagnetic interference around a patient, except for devices allowed by the hospital administrator. Radio waves from devices such as mobile phones or small wireless devices can cause the display of incorrect data.
- The pulse oximeter should *not* be used for arrhythmia analysis.

# CAUTION

- If using pulse oximetry during full body irradiation, keep the sensor out of the radiation field. If the sensor is exposed to the radiation, the reading might be inaccurate or the unit might read zero for the duration of the active irradiation period.
- Never disassemble or repair the SpO2 adapter. Disassembly and repair must be performed by qualified service personnel
- The instrument must be configured to match your local power line frequency to allow for the cancellation of noise introduced by fluorescent lights and other sources

- When patients are undergoing photodynamic therapy they may be sensitive to light sources. Pulse oximetry may be used only under careful clinical supervision for short time periods to minimize interference with photodynamic therapy.
- Do NOT place the pulse oximeter on electrical equipment that may affect the instrument, preventing it from working properly.
- To minimize radio interference, other electrical equipment that emits radio frequency transmissions should NOT be in close proximity to the pulse oximeter.
- Avoid permanent direct contact of the SpO2 sensor with the body. It can burn the skin as the sensor may reach a temperature of 41°C (105.8°F).

#### **NOTICE**

- (USA only) Federal law restricts this device to sale by or on the order of a physician.
- Only use components specified by Hamilton Medical
- All devices are *not* protected against the effect of the discharge of a cardiac defibrillator.
- A functional tester cannot be used to assess the accuracy of the pulse COoximeter.
- Do not shake or swing the SpO2 adapter or sensor while holding the cable. This can break the SpO2 adapter, sensor (probe), or cable.
- Ensure that the accessories used during transport are adequately protected against water ingress.
- The Masimo SET pulse oximetry equipment has been tested and found to comply with the Class B limits for

medical devices according to the EN 60601-1-2, Medical Device Directive 93/42/EEC. These limits are designed to provide reasonable protection against harmful interference in a typical medical installation.

# 1.2 Pulse oximetry measurements safety information

# **↑** WARNING

- If any measurement seems questionable, first check the patient's vital signs by alternate means and then check the pulse oximeter for proper function.
- Inaccurate pulse rate measurements may be caused by:
  - Improper sensor application
  - Low arterial perfusion
  - Motion artifact
  - Low arterial oxygen saturation
  - Excessive ambient or environmental noise
- Inaccurate SpO2 readings may be caused by:
  - Improper sensor application
  - Elevated levels of carboxyhemoglobin (COHb) or methemoglobin (MetHb). High levels of COHb or MetHb may occur with a seemingly normal SpO2. When elevated levels are suspected, perform a laboratory analysis of a blood sample.
  - Dye injected into the blood, such as indocyanine green or methylene blue
  - Externally applied coloring and texture, such as nail polish, acrylic nails, glitter, and so on

- Birthmarks, tattoos, skin discolorations, moisture on skin, deformed or abnormal fingers, and so on
- Skin color disorders
- Elevated levels of bilirubin
- Elevated levels of dyshemoglobin
- Vasospastic disease, such as Raynaud's, and peripheral vascular disease
- Hemoglobinopathies and synthesis disorders such as thalassemias, Hb s, Hb c, sickle cell, and so on
- Hypocapnic or hypercapnic conditions
- An electrosurgical unit is used
- During CPR
- Measuring at a site with a venous pulse
- Low arterial perfusion
- Severe anemia
- The pulse wave is small (the patient has insufficient peripheral circulation)
- Motion artifact
- Interfering substances: Dyes or any substance containing dyes that change usual blood pigmentation may cause erroneous readings.
- SpO2 measurement for patients with carbon monoxide poisoning can be incorrect.
- In case of anemia and blood loss, the SpO2 sensor is unable to detect tissue hypoxia.
- Loss of pulse signal can occur when:
  - The sensor is too tight
  - The patient has hypotension, severe vasoconstriction, severe anemia, or hypothermia

- There is arterial occlusion proximal to the sensor
- The patient is in cardiac arrest or in shock
- The pulsations from intra-aortic balloon support can be additive to the pulse rate on the oximeter pulse rate display. Verify the patient's pulse rate against the ECG heart rate.
- When not measuring SpO2, disconnect the Nihon Kohden adapter from the ventilator. Otherwise, noise from the sensor may interfere and incorrect data may be displayed.

# CAUTION

- Verify SpO2 periodically by comparing measured SpO2 against the patient's SaO2 with an arterial blood gas (ABG) measurement.
- If SpO2 values indicate hypoxemia, a laboratory blood sample should be taken to confirm the patient's condition
- Skin pigmentation can affect the SpO2 value. Periodically verify the SpO2 value by checking the plethysmographic waveform and the quality index of the measured SpO2 value.
- If the Low Perfusion message is frequently displayed, find a better perfused monitoring site. In the interim, assess the patient, and, if indicated, verify oxygenation status through other means
- To ensure that alarm limits are appropriate for the patient being monitored, check the limits each time the pulse oximeter is used.

 Variation in hemoglobin measurements may be profound and may be affected by sampling technique as well as the patient's physiological conditions. Any results exhibiting inconsistency with the patient's clinical status should be repeated and/or supplemented with additional test data. Blood samples should be analyzed by laboratory instruments prior to clinical decision making to completely understand the patient's condition.

## NOTICE

- When static electricity affects the measurement, take necessary remedial actions, such as sufficiently discharging static electricity from the patient and operator, and increasing humidity in the room.
- When a parameter shows dashes (---) or no value, it is not used in any calculations.
- When SpO2 cannot be measured on a patient with insufficient peripheral circulation or IABP, check the SpO2 Sensitivity mode setting on the ventilator. The configuration of the Sensitivity mode may affect whether SpO2 can be measured.
- In the following cases, an SpO2 value may appear on the ventilator display even when the sensor is detached from the patient:
  - The adapter is connected to a ventilator without a defined Sensitivity mode for SpO2 monitoring.
  - The adapter is connected to a ventilator where the Sensitivity mode is set to its highest setting. For details on the settings, see Chapter 6.

# 1.3 Sensor safety information

# **M** WARNING

- If the SpO2 adapter is used with SpO2 sensors other than those specified, the patient and operator can receive an electric shock and the SpO2 adapter can become hot.
- Avoid permanent contact of the SpO2 sensor and the body.
- If a sensor or cable is damaged in any way, discontinue use immediately. Do not use a sensor or patient cable with exposed optical or electrical components.
- Keep the patient away from the cable as much as possible. If the cable coils around the patient by their body movement, the patient can get injured. If this happens, remove the cable promptly.
- As with all medical equipment, carefully route patient cabling to reduce the possibility of patient entanglement or strangulation.
- The sensor cable must face away from the patient. Safely secure the sensor cable out of the way by attaching the sensor cable holding clips to the airway tubing, and connecting the sensor cable to the clips.
- Use disposable sensors only once.
   They cannot be sterilized and can cause cross contamination.
- To avoid cross contamination, only use single-use sensors on the same patient.

- When using Masimo reusable sensors, the site must be checked at least every four (4) hours to ensure adequate adhesion, circulation, skin integrity, and correct optical alignment. For adhesive sensors, check every eight (8) hours, or more frequently when perfusion is poor. If the circulatory condition or skin integrity has deteriorated, the sensor should be applied to a different site.
- When using Nihon Kohden sensors, change the SpO2 sensor measurement site regularly: every eight (8) hours for disposable and every four (4) hours for reusable sensors. The skin temperature may increase at the attached site by 2°C or 3°C degrees and cause a burn or pressure necrosis.
- Check the circulation condition by observing the skin color peripheral to and at the sensor measurement site and the pulse waveform.
- Do not use tape to secure the sensor to the site; this can restrict blood flow and cause inaccurate readings.
- Tissue damage can be caused by incorrect application or use of a sensor, for example, by wrapping the sensor too tightly.
   Inspect the sensor site as directed in the sensor's *Directions for use* to ensure skin integrity and correct positioning and adhesion of the sensor.
- Venous congestion may cause underreading of actual arterial oxygen saturation. Therefore, assure proper venous outflow from the monitored site. The sensor should *not* be below heart level (for example, sensor on hand of a patient in bed with arm dangling to the floor).

- Misapplied sensors or sensors that become partially dislodged may cause either over or under reading of actual arterial oxygen saturation.
- Avoid placing the sensor on any extremity with an arterial catheter, blood pressure cuff, or intravascular line to avoid potential inaccurate measurements or loss of pulse signal.
- Detach the SpO2 sensor before defibrillation.
- To protect from shock, always remove the sensor from the patient and completely disconnect the SpO2 adapter before bathing the patient.

# **CAUTION**

- Under normal conditions, the probe is almost unaffected by light. However, when measuring under strong light (surgical light, sunlight), cover the probe with an ambient light shield made of opaque material. Otherwise, measurement accuracy is affected.
- Do NOT pull, twist, turn, or bend the sensor cable, and do not let caster feet run over the sensor cable. Failure to follow these cautions may cause cable discontinuity, short circuit, skin burn on the patient, and incorrect measurement data, and can permanently damage the sensor. Replace any broken sensor with a new one.
- Redness or skin irritation may appear at the attachment site. Take extreme care of patients with weak skin. In case of redness or skin irritation, change the attachment site or stop using the sensor.
- Routinely check circulation distal to the sensor site.

- If the sensor is wrapped too tightly or supplemental tape is used, venous congestion/pulsations may occur causing erroneous readings and/or pressure injuries.
- When using the probe on the following patients, take extreme care and change the measurement site more frequently according to symptoms and degree:
  - Patient with a fever
  - Patient with insufficient peripheral circulation
  - Neonate or low-birth-weight infant with delicate skin
- If the probe is attached to the same limb that is used for NIBP measurement or an IABP catheter, the blood circulation at the attachment site is affected and the measurement might not be correct. Attach the probe to a limb where the blood circulation is not affected.
- To avoid poor circulation, do not secure the sensor too tightly. Check the blood circulation condition by observing the skin color and congestion at the skin peripheral to the probe attachment site. Even for short-term monitoring, there can be burn or pressure necrosis from poor blood circulation, especially on neonates or low birth weight infants whose skin is delicate. Accurate measurement cannot be performed on a site with poor peripheral circulation.

#### NOTICE

- Read all of the safety information before using the sensor.
- Before use, carefully read the sensor's Directions for use.
- With Masimo SET pulse oximetry, use only Masimo sensors for SpO2 measurements.
- Do *not* loop the patient cabling into a tight coil or wrap around the device, as this can damage the cable.
- High-intensity extreme lights (such as pulsating strobe lights) directed on the sensor may not permit the pulse oximeter to obtain vital sign readings.
- When using the Maximum Sensitivity setting, performance of "Sensor Off" detection may be compromised. If the instrument is in this setting and the sensor becomes dislodged from the patient, the potential for false readings may occur due to environmental noise such as light, vibration, and excessive air movement
- Masimo cables and sensors are provided with X-Cal technology to minimize the risk of inaccurate readings and unanticipated loss of patient monitoring. Refer to the manufacturer's *Directions for use* for sensor and cable lifetime specifications.

This guide includes several descriptions, warnings, and specifications for the pulse oximetry adapter and sensors.

Not all of the information is included here.

 For detailed information about Masimo pulse oximeters, see the Masimo Starter Kit documentation, sensor inserts, and the manufacturer's *Directions for use*. Additional information may also be available at the manufacturers' website: www.masimo.com.

Note that possession or purchase of this device does not convey any express or implied license to use the device with unauthorized sensors or cables which would, alone or in combination with this device, fall within the scope of one or more of the patents relating to this device

For information on Masimo patents, see www.masimo.com/patents

 For detailed information about Nihon Kohden pulse oximeters, see the manufacturer's Directions for use

Be sure to also read the safety information for the ventilator, provided in the ventilator Operator's Manual.

# 

# SpO2 monitoring

2.1	Overview	18
2.2	Getting started	20
2.3	Enabling SpO2 monitoring	20
2.4	Connecting the components	21
2.5	Verifying sensor measurements on the ventilator	24
2.6	Working with alarms	25
2.7	Viewing pulse oximetry data	30
2.8	Troubleshooting	34
2.9	About the SpO2/FiO2 ratio	36

### 2.1 Overview

The HAMILTON-C3 supports SpO2 pulse oximeters from two manufacturers: Nihon Kohden and Masimo. The pulse oximeter comprises a sensor, cables, and adapter.

The sensor takes continuous measurements to provide accurate, reliable data for various pulse oximetry parameters, together with a signal quality indicator. Working with the adapter, the sensor sends this information to the ventilator

These parameters are available:

- In the Monitoring window
- As main monitoring parameters (MMPs)
- In the Dynamic Lung
- As trends

SpO2 high/low alarms that specifies a short waiting period after an alarm condition occurs before the system sounds an audible alarm. Support for pulse oximetry is available

They are subject to applicable alarms, all

of which are controlled at the ventilator.

You can configure an alarm delay for the

with installation and activation of the SpO2 option and related hardware. For ordering details, see the ventilator product catalog.

Table 2-1 describes the options available with each oximeter. Details on each option<sup>1</sup> are provided in this chapter.

Table 2-1. SpO2 pulse oximeter options

Options, Measurements	Nihon Kohden <sup>§</sup>	Masimo SET <sup>§</sup>	Masimo rainbow SET§
SpO2	X	X	X
Pulse	X	X	X
Plethysmogram	X	Х	X
Alarm delay	X	Х	X
Perfusion index (PI)		X	X
Pleth variability index (PVI) <sup>2</sup>		Х	X
SpCO (carboxyhemoglobin)			X
SpMet (methemoglobin)			X
SpHb (total hemoglobin)			X
SpOC (oxygen content)			X

18

<sup>&</sup>lt;sup>1</sup> Masimo rainbow SET measurements are purchasable options for the Masimo pulse oximeter. They require the use of the Masimo SpO2 pulse oximeter. For details, see the Masimo rainbow SET Instructions for Use. Not available in all markets.

<sup>&</sup>lt;sup>2</sup> The PVI parameter must be enabled on the adapter firmware and in the ventilator software. For details about Masimo rainbow SET parameters, contact your Hamilton Medical technical representative or Masimo area sales representative.

# 2.1.1 About the Nihon Kohden pulse oximeter


The Nihon Kohden pulse oximeter comprises a sensor and adapter, with integrated cable and locking cover.

The sensor takes continuous measurements to provide accurate, reliable data for SpO2 and pulse, together with a signal quality indicator. Working with the adapter, the sensor sends this information to the ventilator

Figure 2-1 shows the Nihon Kohden system components<sup>3</sup>.

For connection information, see Section 2.4.1. For configuration details, see Chapter 6.

Figure 2-1. Nihon Kohden pulse oximeter components

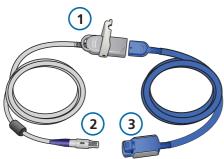

- 1 SpO2 adapter main unit with locking cover (part of cable to ventilator)
- 2 Cable to ventilator
- Sensor and cable

### 2.1.2 About the Masimo SET pulse oximeter


The Masimo SET pulse oximeter comprises a sensor, cables, and adapter.

The sensor takes continuous measurements to provide accurate, reliable data for SpO2, pulse, perfusion index (PI), and pleth variability index (PVI), together with a signal quality indicator. Working with the adapter, the sensor sends this information to the ventilator.

Figure 2-2 shows the Masimo SET system components<sup>3</sup>.

For connection information, see Section 2.4.2. For configuration details, see Chapter 6.

Figure 2-2. Masimo SET components

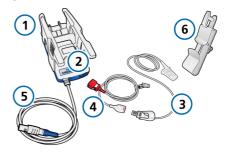

- Adapter
- 4 RD Series patient cable
- Connection ports
- 5 Adapter cable to ventilator
- 3 RD Series sensor
- 6 Sensor cable holder

<sup>&</sup>lt;sup>3</sup> The SpO2 connection on the ventilator is not shown.

# 2.2 Getting started

Getting up and running involves just a few steps.

Table 2-2. Configuration and set up

For technical personnel	See
These one-time initial cor completed by technical p	9
Installing and enabling the communication board	See the board documentation or the ventilator Installation Guide
Configuring sensor settings	Chapter 6

	For medical caregivers	See
	The following tasks are perf personnel caring for patient	,
	Enabling SpO2 monitor- ing in the ventilator Sys- tem window	Section 2.3
	Connecting the components	Section 2.4
	Verifying measurements	Section 2.5
	Setting alarm limits	Section 2.6.1
	Monitoring the patient data	Section 2.7
	Cleaning and mainte- nance	Chapter 3

# 2.3 Enabling SpO2 monitoring

Sensor data is integrated with the ventilator monitoring system.

#### To enable SpO2 monitoring


- Touch System > Sensors.
- 2. Touch the On/Off button on the left, if not already selected.
- 3. Touch the SpO2 sensor checkbox.

The status text active appears next to the checkbox as long as the adapter is connected to the ventilator.

If the status area is empty, the adapter is not connected.

You can also specify sensor acquisition settings, if needed. See Sections 6.4 and 6.5.

Figure 2-3. Enabling SpO2 monitoring

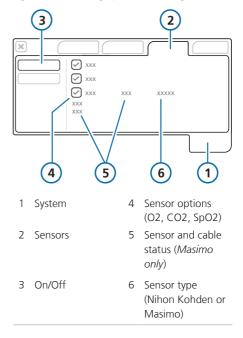

# 2.4 Connecting the components

Before connecting the patient, carefully read the warnings and cautions at the beginning of this guide.

For additional details about setting up the sensor cable holder, see the SpO2 Sensor cable holder user guide.

See the following sections depending on your pulse oximeter:

- For Nihon Kohden, see Section 2.4.1.
- For Masimo, see Section 2.4.2.

# 2.4.1 Connecting the Nihon Kohden pulse oximeter

Connecting the components comprises the following steps:

- 1. Connect the cables to the sensor and to the ventilator.
- 2. Attach the sensor to the patient.

Once connected, verify the sensor measurements on the ventilator display. See Section 2.5.

Figure 2-4. Connecting the Nihon Kohden adapter cable to ventilator




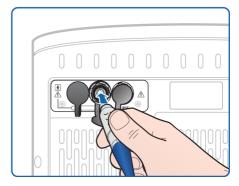


Figure 2-5. Connecting the sensor cable to Nihon Kohden adapter

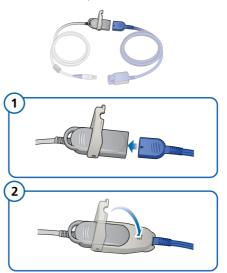



### 2.4.1.1 Disconnecting Nihon Kohden components

#### To disconnect the components

- 1. Remove the sensor from the patient.
- 2. Open the adapter cover and disconnect the sensor cable
- 3. Disconnect the adapter cable from the communication board on the ventilator by gently pulling back the connector and pulling it out from the connection port.
- 4. Cover the port with the attached rubber cover.

Figure 2-6. Disconnecting the Nihon Kohden pulse oximeter components

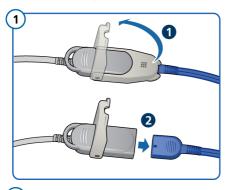

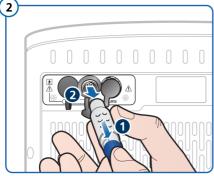

### 2.4.2 Connecting the Masimo pulse oximeter


Refer to the sensor Directions for use for connection and disconnection details.


Connecting the components comprises the following steps:


- 1. Attach the adapter where desired, ensuring the adapter handle clicks into place and is securely attached. For detailed instructions, see the Sensor Cable Holder User Guide (PN 627167).
- 2. Connect the cables.
- 3. Attach the sensor to the patient.

The following illustrations show connecting the RD Series sensor cables.

Figure 2-7. Connecting the Masimo components

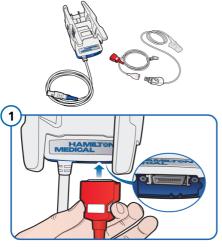

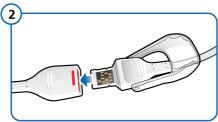

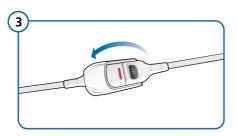

Once connected, attach the sensor to the patient, and verify the sensor measurements on the ventilator display. See Section 2.5.

Figure 2-8. Connecting Masimo adapter to ventilator





### 2.4.2.1 Disconnecting the Masimo components


Refer to the sensor *Directions for use* for connection and disconnection details.

#### To disconnect the components


- 1. Remove the sensor from the patient.
- 2. Open the adapter cover and disconnect the sensor cable.
- 3. Disconnect the patient cable from the adapter.
- 4. Disconnect the adapter cable from the communication board on the ventilator by gently pulling back the connector and pulling it out from the connection port.

- 5. Cover the port with the attached rubber cover.
- 6. Remove the adapter from the rail, if needed

Figure 2-9. Disconnecting Masimo components

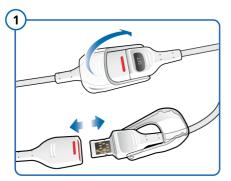



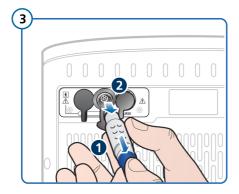

# 2.5 Verifying sensor measurements on the ventilator

When SpO2 monitoring is enabled on the ventilator and the sensor is connected to the ventilator and to the patient, measurements recorded by the pulse oximeter are displayed in the Monitoring > SpO2 window.


During active ventilation, if the device does not detect a pulse for 30 seconds, the ventilator generates a patient disconnection alarm

#### To verify that measurements are being recorded

- 1. Start ventilating the patient.
- 2. On the ventilator, touch **Monitoring** > **SpO2** (Figure 2-10).

The SpO2 value is displayed approximately 10 seconds after placing the sensor. Note that the values may take up to 30 seconds to be displayed.

Figure 2-10. Pulse oximetry data, Monitoring window

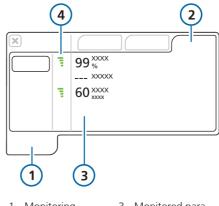

- 1 Monitoring
- 3 Monitored parameter values
- 2 SpO2
- 4 Quality index

24

If you do not see any oximeter-related measurements, ensure that the SpO2 sensor is enabled in the System > Sensors > On/Off window. See Section 2.3.

You can configure sensor acquisition settings as appropriate for the patient during ventilation. See Sections 6.4 and 6.5

### 2.5.1 Reviewing the Masimo sensor and cable status

Masimo sensors and cables incorporate a specified lifetime. When this lifetime expires, the affected sensor or cable no longer functions and must be replaced.

Use the System > Sensors window to monitor the sensor and cable lifetime and operation status.

Hamilton Medical recommends that you check the sensor and cable status before each patient use.

#### To review Masimo sensor and cable status

Touch System > Sensors > On/Off (Figure 2-3).

The sensor and cable status are listed below the SpO2 checkbox.

Table 2-3. Masimo sensor and cable operation status

Status message	Description
Ok	The device is operational.
Near expi- ration	The device is approaching its intended maximum usage. Be sure to change the affected component before the next patient use.
Expired	The device is expired and no longer operational. An SpO2 sensor error message is generated.  Replace the device.

# 2.6 Working with alarms

You can specify alarm limits for several pulse oximetry parameters. In addition, default ranges can be defined in configuration.

During an active SpO2 alarm, the SpO2 parameter is displayed in the color corresponding to the associated alarm priority. For the list of alarms, see Section 2.6.3.

See the ventilator Operator's Manual for details about reviewing and working with alarms.


# 2.6.1 Setting alarm limits

#### NOTICE

The ventilator Auto alarm function does not apply to pulse-oximetry alarms.

Pulse-oximetry-related alarms are displayed in the Alarms > Limits 2 window4

Figure 2-11. Pulse oximetry alarms

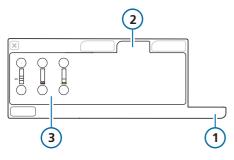

- Alarms
- 3 Pulse oximetry alarms

#### 2 Limits 2

The PVI alarm limits are available only when the option is enabled.

The high and low SpO2 alarm limits are a special case: you can set a short alarm delay as described in Section 2.6.2.

# 2.6.2 SpO2 alarm delay

Oxygen saturation levels can be relatively variable but the changes are transient, and as such, do not generally require clinical intervention

To reduce the number of alarms that are not actionable (that is, nuisance alarms), a short delay of up to 15 seconds can be configured after a Low SpO2 or High SpO2 alarm condition occurs before the system displays the message and sounds the alarm.

The alarm delay is set in the System > Sensors > SpO2 window. See the appropriate section for Nihon Kohden or Masimo in Chapter 6.

<sup>&</sup>lt;sup>4</sup> Additional ventilator alarm settings are available in the Alarms > Limits 1 window. When the Masimo rainbow SET option is enabled, related alarm settings are available in the Alarms > Limits 3 window.

# 2.6.3 Pulse-oximetry-related alarms

The following table lists the pulse-oximetry-related alarms.

Table 2-4. SpO2 alarms, priority, and corrective actions

Alarm/Priority	Definition/Corrective action
SpO2: Adapter missing	SpO2 adapter is disconnected from ventilator.
Medium priority.	To resolve
	Connect an adapter.
	Replace adapter.
SpO2: Light interference	Light interference with the sensor.
Medium priority.	To resolve
	<ul> <li>Check sensor for visible contamination, clean sensor windows.</li> </ul>
	Cover sensor or change attachment site.
	<ul> <li>Verify line frequency setting (Configuration).</li> </ul>
	Replace sensor.
SpO2: Low perfusion index	Masimo only.
Medium priority.	Perfusion index was too low for at least 30 seconds.
	To resolve
	Move sensor to a better perfused site.
SpO2: Poor signal	Nihon Kohden only.
Medium priority.	Pulse from SpO2 sensor was not found. Sensor may be detached from patient or secured too tightly, preventing circulation.
	To resolve
	Check patient condition.
	Change attachment site.
	• Reattach sensor less tightly.
SpO2: Probe missing	Sensor disconnected from adapter or cable is defective.
Medium priority.	To resolve
, ,	
, ,	Connect sensor to adapter.

Alarm/Priority	Definition/Corrective action
SpO2: Patient disconnected  Medium priority.	Sensor is disconnected from patient or not properly attached to patient, or sensor is faulty.
, ,	To resolve
	Check sensor attachment to patient.
	Replace sensor.
SpO2: Sensor error	Any of the following:
Medium priority.	<ul> <li>Hardware problem with sensor or connected sensor is incompatible.</li> </ul>
	<ul> <li>Sensor/cable has expired (Masimo only).</li> </ul>
	To resolve
	Replace adapter, patient cable, and/or sensor.
High Pl	Masimo only.
Medium priority.	Peripheral perfusion exceeds the set limit.
	To resolve
	Check patient condition.
	Check settings, including alarms.
Low Pl	Masimo only.
Medium priority.	Peripheral perfusion is below the set limit.
	To resolve
	Check patient condition.
	<ul> <li>Move sensor to a better perfused site.</li> </ul>
High PVI	Masimo only.
Medium priority.	Pleth perfusion variability exceeds the set limit.
	To resolve
	Check patient condition.
	<ul> <li>Check settings, including alarms.</li> </ul>
Low PVI	Masimo only.
Medium priority.	Pleth perfusion variability is below the set limit.
	To resolve
	Check patient condition.
	<ul> <li>Move sensor to better perfused site.</li> </ul>

Alarm/Priority	Definition/Corrective action
High pulse	Pulse rate exceeds the set limit.
Medium priority.	To resolve
	Check patient condition.
	Check settings, including alarms.
Low pulse	Pulse rate is below the set limit.
Medium priority.	To resolve
	Check patient condition.
	Check settings, including alarms.
High SpO2	SpO2 exceeds the set limit.
Low priority.	To resolve
	Check patient condition.
	Check settings, including alarms.
Low SpO2  High priority or medium priority.	The Low SpO2 alarm has two levels of priority, depending on how much below the limit the measured value is.
g peg eee peg.	Medium priority.
	SpO2 meets all of the following conditions:
	Below the set limit.
	• Above 85%.
	• Above (limit - 2% of set limit).
	High priority.
	SpO2 is either of the following:
	• Lower than (limit - 2% of set limit) even if above 85%.
	• Below 85%.
	To resolve
	Check patient condition.
	Check settings, including alarms.

# 2.7 Viewing pulse oximetry data

Sensor data is updated every second. Pulse oximeter data is readily available as follows:

View SpO2-related data	See
In the Monitoring window	Section 2.7.2
On the main display	Section 2.7.3
In the Dynamic Lung panel	Section 2.7.4
In a Plethysmogram	Section 2.7.5
As a Trend graph	Section 2.7.6

Basic sensor information is displayed in the System > Sensors window. Additional sensor data is available in Configuration (Chapter 6).

# 2.7.1 Monitored parameters

The following tables provide an alphabetical list of the pulse-oximetry-related monitored parameters.

This data is displayed in the Monitoring > SpO2 window. The measured SpO2 value is also displayed under the MMP list at the bottom left of the display.

- Section 2.7.1.1 describes parameters supported with Nihon Kohden.
- Section 2.7.1.2 describes parameters supported with Masimo.

#### 2.7.1.1 Parameters supported with Nihon Kohden

For parameter ranges and accuracy information, see Chapter 4.

Table 2-5. Nihon Kohden SpO2 parameters

Setting	Description
Pulse rate (bpm) (displayed on device as 1/min)	Pulse
SpO2 (%)	Arterial oxygen saturation in blood
SpO2/FiO2 (%)	Calculated approximation of PaO2/FiO2 when SpO2 is 94% or lower <sup>5</sup> .
	Calculated as:
	100*SpO2 / Oxygen
	For details, see Section 2.9.

<sup>&</sup>lt;sup>5</sup> When SpO2 exceeds 94%, the SpO2/FiO2 ratio is not calculated; the display shows dashes (---).

#### 2.7.1.2 Parameters supported with Masimo SET

For parameter ranges and accuracy information, see Chapter 5.

Table 2-6. Masimo SET SpO2 parameters

Settings	Description
Perfusion index (PI) (%)	Pulse strength.
Pleth variability index (PVI) (%)	Measure of peripheral perfusion changes. For details, see Section 2.7.1.3.
Pulse rate (bpm) (displayed as 1/min)	Pulse.
SpO2 (%)	Arterial oxygen saturation in blood.
SpO2/FiO2 (%)	Calculated approximation of PaO2/FiO2 when SpO2 is 94% or lower <sup>6</sup> .
	Calculated as:
	100*SpO2 / Oxygen
	For details, see Section 2.9.

#### 2.7.1.3 About the Pleth Variability Index (PVI)

PVI<sup>7</sup> is only supported with use of a Masimo SET pulse oximeter. This parameter must be enabled on the adapter firmware.

PVI is a measure of the dynamic changes in the perfusion index (PI) that occur during the respiratory cycle. It can be closely related to intrathoracic pressure changes.

This index can be used as an early indicator by the clinician to help determine whether to administer fluids to the patient.

PVI is displayed in the Monitoring window, as well as in the Dynamic Lung panel.

You can set high and low alarm limits.

You can check whether the option is available in the Configuration > Sensors > Upgrade window. For details, contact your Hamilton Medical technical representative.

For additional information about the PVI parameter, see the following:

- Chapter 5 of this guide
- Masimo SET product documentation

<sup>&</sup>lt;sup>6</sup> When SpO2 exceeds 94%, the SpO2/FiO2 ratio is not calculated; the display shows dashes (---).

<sup>&</sup>lt;sup>7</sup> The PVI parameter must be enabled on the adapter firmware and in the ventilator software. For details about Masimo rainbow SET parameters, contact your Hamilton Medical technical representative or Masimo area sales representative.

# 2.7.2 Viewing data in the Monitoring window

The Monitoring > SpO2 window provides access to the pulse oximetry data. See Section 2.5.

The quality index shows the sensor's evaluation of the signal quality. A low quality index indicates a poor signal due to interference from excessive motion or other cause

Table 2-7. Quality index display


Quality indicator	Confidence value
4 gray (or blue) bars, no data	OFF (no information).
1 red bar, poor quality	The data from the sensor is not usable or the parameter measurement is still initializing.
2 orange bars, medium quality	The data from the sensor is acceptable for most uses.
•	An alarm may be active that could affect how accurately this parameter is currently measured.
3 green bars, good quality	The data from the sensor is reliable.
4 green bars, best quality	The data from the sensor is highly stable and reliable.

# 2.7.3 Viewing data on the main display

As with other parameters, any of the monitored pulse oximetry parameters can be configured as a main monitoring parameter (MMP). For configuration details, see your ventilator Operator's Manual.

When SpO2 monitoring is enabled, the low SpO2 alarm limit and measured SpO2 value are always displayed under the MMP list, as shown in Figure 2-12.

Figure 2-12. SpO2 data in main display

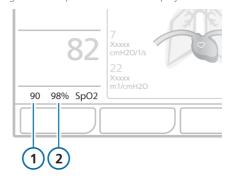

- 1 Low SpO2 alarm limit
- Measured SpO2 value

32

# 2.7.4 Viewing data in the Dynamic Lung panel


#### NOTICE

If the large heart is not displayed, the SpO2 option is disabled or not installed.

When the SpO2 option is enabled, the Dynamic Lung panel is expanded to show the circulation of blood through the heart, superimposed on the breathing of the lungs. See your ventilator Operator's Manual for details

The Dynamic Lung panel displays the following data: Rinsp, Cstat, PetCO2, SpO2, Pulse. PVI (Masimo only)

Figure 2-13. Dynamic Lung panel

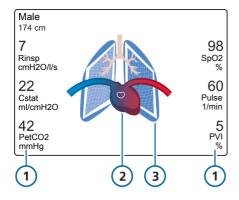

- Parameter values8
- Real-time lung display
- 2 Real-time heart and pulse display

The heart and pulse display varies as described next

Table 2-8. Heart and pulse display



The data from the SpO2 sensor is not usable or the parameter measurement is still initializing.



The small white heart pulsates in time with the patient's pulse.


SpO2 is being measured.

For additional details about the Dynamic Lung panel, including how to display it, see your ventilator Operator's Manual.

# 2.7.5 Reviewing the plethysmogram

A plethysmogram is a waveform that represents the pulsating blood volume; it is generated by the pulse oximeter.

Figure 2-14. Plethysmogram waveform (adult)

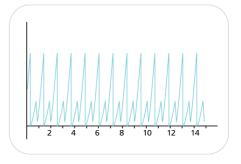

The time scale displayed is the same as for other waveforms. For details, see your ventilator Operator's Manual.

With Masimo sensors, the graph also shows the currently selected sensor sensitivity setting when set to Maximum or APOD (see Section 6.5.2). No text is displayed when the setting is Normal.

<sup>8</sup> The PVI parameter is displayed only with Masimo sensors.

#### To display the plethysmogram

- 1. Touch the area of the display where you wish to show the plethysmogram as described in your ventilator Operator's Manual
  - The graphics selection window appears.
- 2. Touch the Waveforms tab, and then the **Plethysmogram** button.

The plethysmogram is displayed.

#### 2.7.6 Viewing data as trends

You can view trend data for the following pulse oximetry-related parameters: SpO2, Pulse, SpO2/FiO2, PI (Masimo only), PVI (Masimo only), and QI-SpO2

For details, see your ventilator Operator's Manual.

# 2.8 Troubleshooting

Table 2-9 describes how to address some potential pulse oximeter issues. Be sure to also check the information provided in Section 2.6.3

Note that one of the most common reasons for a poor or absent signal is having one or more bent pin(s) in the connector head

Table 2-9. Troubleshooting issues

Message/Issue	Details	Actions
No <b>SpO2</b> tab or disabled <b>SpO2</b> tab in <b>Monitoring</b> window	SpO2 monitoring is not enabled.	When no <b>SpO2</b> tab is visible, the SpO2 hardware is not enabled. Check Configuration.  Ensure the SpO2 checkbox is selected in the System > Sensors > On/Off window.
No pulse oximetry data is displayed in the Monitor- ing > SpO2 window	<ul> <li>A component is damaged: for example, pins may be bent in the connector head.</li> <li>An unsupported sensor is connected.</li> </ul>	Replace adapter, patient cable, or sensor, as appropriate.
The Monitoring > SpO2 window shows values as dashes	<ul> <li>A component is disconnected or damaged.</li> <li>A sensor/adapter- or disconnection-related alarm is generated.</li> </ul>	<ul> <li>Check the connection from the adapter to the ventilator.</li> <li>Check the patient cable connection to the adapter.</li> <li>Check the connection between the sensor and the patient cable.</li> </ul>
No pulse oximetry data in Configuration > Sensors > Upgrade window	The communication board is not installed.	Have the communication board installed.
No reading for a patient with an intra-aortic bal- loon pump (IABP) or insuf- ficient peripheral circula- tion	Sufficient blood perfusion is required to generate a valid SpO2 signal.	Check the SpO2 real-time wave- form and the quality indicator. If the quality is poor, do the follow- ing:  Reattach the probe to a differ- ent site.  Reconnect the pulse oximeter components.  Replace the probe.

Message/Issue	Details	Actions
An SpO2 value is displayed on the ventilator when the sensor is detached from, or not attached to,	The system may also display no signal, poor signal, no sensor, or patient disconnect- ed message.	Check the SpO2 real-time wave- form and the quality indicator. If the quality is poor, do the follow- ing:
the patient.		• Reattach the probe to a different site.
		• Reconnect the pulse oximeter components.
		Replace the probe.

# 2.9 About the SpO2/FiO2 ratio

For the diagnosis of acute respiratory distress syndrome (ARDS) and acute lung injury (ALI), the PaO2/FiO2 ratio index is used. PaO2 is the partial pressure of oxygen in the arterial blood measured by an arterial blood gas test, and FiO2 is the fraction of inspired oxygen (Oxygen control) set on the ventilator. PaO2/FiO2 is used as a measure of blood hypoxia.

The SpO2/FiO2 ratio (%) is an approximation of the PaO2/FiO2 ratio, which, in contrast to PaO2/FiO2, can be calculated noninvasively and continuously.

The SpO2/FiO2 ratio is a useful monitoring value for bedside assessment of a patient's oxygenation status. It can also be helpful for ALI and ARDS diagnoses and patient follow up.

The ventilator calculates and displays the SpO2/FiO2 ratio when the measured SpO2 is 94% or lower

When SpO2 exceeds 94%, the SpO2/FiO2 ratio is not calculated; the display shows dashes (---). At these higher oxygen saturation levels, the correlation between SpO2 and PaO2 is poor (the oxygen-hemoglobin curve flattens out), so SpO2/FiO2 is no longer a good approximation of PaO2/ FiO2.

# Maintenance

3.1	Safety information	38
3.2	Cleaning the adapter and sensor	39
3.3	Replacing the adapter, cables, or sensor	39
3.4	Disposing of the adapter, cables, and sensor	39

# 3.1 Safety information

### **Maintenance safety information**

# **↑** WARNING

- Electric shock hazard. Only a qualified operator may perform maintenance procedures specifically described in this manual.
- To protect against injury, follow the directions below:
  - Avoid placing the device on surfaces with visible liquid spills.
  - Do not soak or immerse the device in liquids.
  - Do not attempt to sterilize the device
  - Use cleaning solutions only as instructed in these *Instructions for* use
  - Do not attempt to clean the device while monitoring the patient.
- Do not adjust, repair, open, disassemble, or modify the pulse oximeter or accessories. Injury to personnel or equipment damage could occur.
   Return the pulse oximeter for servicing if necessary.

## **A** CAUTION

- Electrical shock and flammability hazard. Before cleaning, always turn off the instrument and disconnect from any power source.
- Electric shock hazard. Before maintenance or cleaning, disconnect the SpO2 adapter from the device. Failure to comply with this instruction can result in electrical shock and SpO2 malfunction or both.

- Electrical shock hazard. Carry out periodic tests to verify that leakage currents of patient-applied circuits and the system are within acceptable limits as specified by the applicable safety standards. The summation of leakage currents must be checked and in compliance with IEC 60601-1 and UL60601-1. The system leakage current must be checked when connecting external equipment to the system. When an event such as a component drop of approximately 1 meter or greater, or a spillage of blood or other liquids occurs, retest before further use. Injury to personnel could occur.
- Do NOT submerge the pulse oximeter in any cleaning solution or attempt to sterilize by autoclave, irradiation, steam, gas, ethylene oxide, or any other method. This will seriously damage the pulse oximeter.
- Do NOT immerse the SpO2 adapter in any chemical solution or water. Do NOT use a wet SpO2 adapter; correct measurement may not be possible. If the adapter is immersed, wipe off liquid with a dry cloth and thoroughly dry the adapter.
- Before maintenance or cleaning, disconnect the SpO2 adapter from the ventilator. Failure to do so may result in electrical shock and SpO2 adapter error.
- Do NOT modify, alter, or repair the sensor and/or adapter in any way.
   Alterations or modification may affect performance and/or accuracy, as well as the manufacturer's warranty.
- After cleaning and before use, wipe liquid off with a dry cloth and thoroughly dry the adapter.

- If there is a possibility that the SpO2 adapter may come into contact with a chemical solution, use the SpO2 adapter with the sensor connector in a vertical and downward position.
- If fluid is spilled into the SpO2 adapter, stop using it and contact the manufacturer.
- Do NOT disinfect and sterilize the SpO2 adapter. Doing so will damage the adapter.
- Disposal of product: Comply with local laws in the disposal of the instrument and/or its accessories.

## 3.2 Cleaning the adapter and sensor

### To clean the adapter

- 1. Periodically clean the SpO2 adapter by wiping it with a soft cloth moistened with ethanol (15°C (59°F), 76.9% to 81.4% by volume).
- 2. Dry the adapter completely after cleaning.

### To clean a reusable sensor

- 1. Remove the sensor from the patient.
- 2. Disconnect the sensor and the patient cable from the adapter.
- 3. Nihon Kohden: Wipe the components with a soft cloth moistened with a 2.0% glutaraldehyde solution or 0.5% alkyldiaminoethylglycine hydrochloride.
  - Masimo: Wipe the components with a soft cloth moistened with a 70% isopropyl solution.
- 4. Allow to air dry before reuse.

# 3.3 Replacing the adapter, cables, or sensor

When an SpO2 adapter, cable, or sensor is broken, cracked, or visibly damaged, immediately stop using it and replace it with a new one

# 3.4 Disposing of the adapter, cables, and sensor

Follow your local laws for environmental protection when disposing of an SpO2 adapter, cables, and/or sensors. For detailed information, contact your Hamilton Medical technical representative.

# Specifications: Nihon Kohden

4.1	Parameter specifications	42
4.2	Alarm specifications	44
4 3	Technical specifications	4

# 4.1 Parameter specifications

Table 4-1. Pulse oximetry parameters, ranges, and resolution

Parameter (units)	Range	Resolution
Pulse (bpm) (displayed as 1/min)	0 to 240	1
SpO2 (%)	0 to 100	1
SpO2/FiO2 <sup>9</sup> (%)	0 to 500	1

## 4.1.1 Accuracy of measurements

Table 4-2. Nihon Kohden SpO2 parameters, accuracy<sup>10</sup>

Parameter		Accuracy
,	, ,	at temperatures 4.4°F and 104°F)
SpO2, no motion	70% to 100%	±3% <sup>11</sup>
Pulse rate (bp	om)	±3%, ±1 bpm

Table 4-3. Nihon Kohden SpO2 sensor accuracy: Sensor SpO2 values compared to functional SaO2 measured by a CO-oximeter (see Notes below)

SpO2 sensor	281951, 281952, 281953, 281954	281947	281948, 281949
70% to 79.9%	2.03%	1.62%	2.79%
80% to 89.9%	1.57%	1.16%	1.87%
90% to 100%	1.23%	1.01%	1.07%

### **Neonatal use**

Clinical functionality has been demonstrated on a population of hospitalized neonate patients. The observed SpO2 accuracy measured by the sensor was within 2.6% of the measured SaO2 value by a CO-oximeter in a study of 55 patients weighing between 447 and 2,458 grams. 368 observations were made spanning a range of 70% to 100% SaO2.

<sup>&</sup>lt;sup>9</sup> When SpO2 exceeds 94%, the SpO2/FiO2 ratio is not calculated; the display shows dashes (---).

<sup>&</sup>lt;sup>10</sup> Accuracy calculated using the root mean square (rms).

 $<sup>^{11}</sup>$  For SpO2 measurements from 80% to 100% the accuracy is  $\pm 2\%$ .

#### **Notes**

The following information relates to accuracy of Nihon Kohden pulse oximetry measurements.

- The SpO2 accuracy was tested using the TL-201T, TL-260T, TL-271T, TL-631T, TL-051S, and TL-535U SpO2 probes. The testing was performed during induced hypoxia on healthy volunteers (Ethnicity: 10 Caucasians, 2 Africans, 4 Asians, 1 Haitian, 3 Hispanics, 2 Hispanics/Caucasians, 6 Indians; Skin: 7 Light, 4 Light/Medium, 10 Medium, 1 Med/Dark, 6 Dark; Age: 21 to 30; Gender: 17 men and 11 women) under the condition of no motion Arterial blood was sampled and measured by a CO-oximeter. The difference between SpO2 measured by the SpO2 probe and functional SaO2 measured by a CO-oximeter was calculated using the root-mean-square (rms) according to ISO 80601-2-61:2017. This measurement accuracy figure represents twothirds of all test measurements
- A pulse oximeter tester that generates simulated signals can be used to check the difference from the design specification, but it cannot be used as a replacement for human signals for testing accuracy.
- In the first two graphs that follow, response time is selectable. Options are Slow, Normal, Fast, and Extra Fast.

Figure 4-1. Response time, SpO2 changes 0.6%/s, 70 bpm

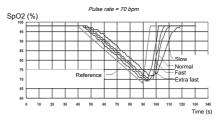


Figure 4-2. Response time, SpO2 changes 0.6%/s. 140 bpm



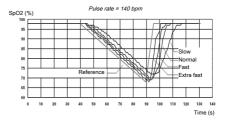


Figure 4-3. Response time, pulse rate changes 10 bpm/s

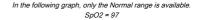

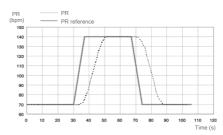

# 4.2 Alarm specifications

Table 4-4. Adjustable alarm ranges, default settings, and resolution

Alarm (units)	Range: Adult/ped/neo	Default: Adult/ped	Default: Neo	Resolution
Beats per minute (bpm) are	e displayed as 1/min.			
Pulse low (bpm)	30 to 230	50	100	5
Pulse high (bpm)	35 to 235	140	180	5
SpO2 low (%)	70 to 99	90	90	1
	When SpO2 monito measured SpO2 valu		•	
SpO2 high (%)	71 to 100/OFF	OFF	95	1

# 4.3 Technical specifications

For sensor and other additional specifications, refer to the ventilator Operator's Manual and the Nihon Kohden product documentation.

Table 4-5. Nihon Kohden adapter specifications

Feature	Specifications
Dimensions (mm)	34 W x 18 H x 117 D
Cable length	2.5 m
Weight	95 g ±10% (including cable and connector)
Degree of protection (solid particle and liquid ingress)	IPX2 Protected against dripping water when the device is tilted to a maximum of 15 degrees
Mode of operation	Continuous
Wavelength <sup>12</sup>	Nihon Koden pulse oximeters have two wavelengths with peaks in the range of 650 and 950 nm

<sup>&</sup>lt;sup>12</sup> The wavelength range can provide especially useful information to clinicians.

44

Feature	Specifications		
Maximum light intensity	< 5.5 mW/sr		
Applied part classification (per IEC 60601-1)	Type BF		
Operating requirements			
Operating temperature	10°C to 40°C (50°F to 104°F)		
Operating humidity	30% to 85% relative humidity, noncondensing		
Operating pressure	700 to 1060 hPa		
Storage requirements			
Storage temperature	-20°C to 65°C (-4°F to 149°F)		
Storage humidity	10% to 95% relative humidity, noncondensing		
Storage pressure	700 to 1060 hPa		
Configuration settings			
For details about the configuration settings, see Table 6-3.			
SpO2 alarm delay (s)	0, 5 (default), 10, 15		
SpO2 response	Slow, Normal (default), Fast, Extra fast		
Pulse detection sensitivity	Low, Normal (default), High		
Sensitivity mode	Maximum, Normal (default)		
Alarms			
Out of limit alarms: SpO2, Pulse rate	High/low alarms		
Sensor condition alarm	No Sensor, Sensor Off, Sensor defect, Sensor error		

# Specifications: Masimo SET

5.1	Parameter specifications	48
5.2	Alarm specifications	52
5.3	Technical specifications	53

# 5.1 Parameter specifications

Table 5-1. Pulse oximetry parameters, range, and resolution

Parameter (units)	Display range	Resolution
Perfusion index (PI) (%)	0 to 20	0.01 if value < 1 0.1 if value ≥ 1
Pleth variabil- ity index (PVI) (%)	0 to 100	1
Pulse (bpm) (displayed as 1/min)	0 to 240	1
SpO2 (%)	0 to 100	1
SpO2/FiO2 <sup>13</sup> (%)	0 to 500	1

### 5.1.1 Accuracy of measurements

Table 5-2. Masimo RD Series SpO2 parameters, accuracy

See the notes after the table for additional details about the accuracy testing. For more information, see the Masimo SET product documentation.		
SpO2, no motion,	±2% adults/	
70% to 100%	pediatrics	
SpO2, motion, 70%	±3%, adults/	
to 100%	pediatrics	
SpO2, low perfusion,	±2%, adults/	
70% to 100%	pediatrics	

Parameter	Accuracy
Pulse rate, no motion, 25 to 240 bpm	±3 bpm, adults/ pediatrics
Pulse rate, motion, 25 to 240 bpm	±5 bpm, adults/ pediatrics
Pulse rate, low perfusion, 25 to 240 bpm	±3 bpm, adults/ pediatrics

#### Notes

The following information relates to accuracy of Masimo SET pulse oximetry measurements.

- Sensor accuracy is specified when used with Masimo technology using a Masimo patient cable for RD SET sensors. Numbers represent A<sub>rms</sub> (RMS error compared to the reference). Because pulse oximeter measurements are statistically distributed, only about twothirds of the measurements can be expected to fall within a range of ±A<sub>rms</sub> compared to the reference value. Unless otherwise noted, SpO2 accuracy is specified from 70% to 100%. Pulse Rate accuracy is specified from 25 to 240 bpm.
- Masimo RD SET sensor types have the same optical and electrical properties and may differ only in application type (adhesive/non-adhesive/hook & loop), cable lengths, optical component locations (top or bottom of sensor as aligned with cable), adhesive material type/size, and connector type (RD 15 pin modular plug). All sensor accuracy

48

<sup>&</sup>lt;sup>13</sup> When SpO2 exceeds 94%, the SpO2/FiO2 ratio is not calculated; the display shows dashes (---).

- information and sensor application instructions are provided with the associated sensor Directions for use
- The Masimo sensors have been validated for no-motion accuracy in human blood studies on healthy adult male and female volunteers with light to dark skin pigmentation in induced hypoxia studies in the range of 70% to 100% SpO2 against a laboratory COoximeter and ECG monitor. This variation equals plus or minus one standard deviation, which encompasses 68% of the population.
- The Masimo sensors have been validated for motion accuracy in human blood studies on healthy adult male and female volunteers with light to dark skin pigmentation in induced hypoxia studies in the range of 70% to 100% SpO2 against a laboratory COoximeter and ECG monitor. This variation equals plus or minus one standard deviation, which encompasses 68% of the population.
- The Masimo SET technology has been validated for low-perfusion accuracy in bench-top testing against a Biotek Index 2 simulator and Masimo's simulator with signal strengths of greater than 0.02% and transmission of greater than 5% for saturations ranging from 70% to 100%. This variation equals plus or minus one standard deviation, which encompasses 68% of the population.

- The Masimo sensors have been validated for pulse-rate accuracy for the range of 25 to 240 bpm in bench-top testing against a Biotek Index 2 simulator. This variation equals plus or minus one standard deviation, which encompasses 68% of the population.
- The following substances may interfere with pulse CO-oximetry measurements:
  - Elevated levels of methemoglobin (MetHb) may lead to inaccurate SpO2 measurements.
  - Elevated levels of carboxyhemoglobin (COHb) may lead to inaccurate SpO2 measurements.
  - Severe anaemia may cause erroneous SpO2 measurements.
  - Dyes or any substance containing dyes that change usual blood pigmentation may cause erroneous readings.
  - Elevated levels of total bilirubin may lead to inaccurate SpO2 measurements

### A<sub>RMS</sub> values measured with Masimo RD SET sensors

The following tables and graphs show A<sub>RMS</sub> values measured with Masimo RD SET sensors in a clinical study.

Figure 5-1. A<sub>RMS</sub> values, Masimo RD SET DCI & DCI-P sensors

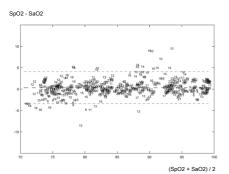


Table 5-3.  $A_{\rm RMS}$  values, Masimo RD SET DCI & DCI-P sensors

Range	Measured A <sub>RMS</sub>	
90% to 100%	1.44%	
80% to 90%	2.30%	
70% to 80%	1.84%	
Overall claimed accuracy value		
70% to 100%	1.90%	

Figure 5-2. A<sub>RMS</sub> values, Masimo RD SET DBI

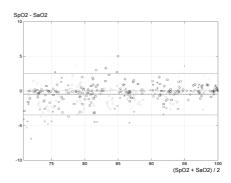


Table 5-4. A<sub>RMS</sub> values, Masimo RD SET DBI sensors

Range	Measured A <sub>RMS</sub>
90% to 100%	1.01%
80% to 90%	1.54%
70% to 80%	2.06%
Overall claimed accurac	y value
70% to 100%	1.60%

Figure 5-3.  $A_{RMS}$  values, Masimo RD SET TC-I sensors

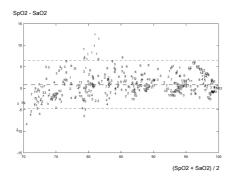


Table 5-5.  $A_{RMS}$  values, Masimo RD SET TC-I sensors

Range	Measured A <sub>RMS</sub>
90% to 100%	2.16%
80% to 90%	2.54%
70% to 80%	3.97%
Overall claimed accura	cy value
70% to 100%	3.02%

# 5.2 Alarm specifications

The following table provides details for adjustable alarms.

Table 5-6. Adjustable alarms

Alarm (units)	Range: Adult/ped/neo	Default: Adult/ped	Default: Neo	Resolution
Beats per minute (	(bpm) are displayed	on the device as 1/m	nin.	
PI low (%)	OFF / 0.03 to 18.00	OFF	OFF	0.01 < 1 0.10 ≥ 1
PI high (%)	0.04 to 19.00 / OFF	OFF	OFF	0.01 < 1 0.10 ≥ 1
PVI low (%)	OFF / 1 to 99	OFF	OFF	1
PVI high (%)	2 to 100 / OFF	OFF	OFF	1
Pulse low (bpm)	30 to 230	50	100	5
Pulse high (bpm)	35 to 235	140	180	5
SpO2 low (%)	70 to 99	90	90	1
	When SpO2 monitoring is enabled, the low SpO2 alarm limit and measure SpO2 value are always displayed below the MMP list.		nit and measured	
SpO2 high (%)	71 to 100/OFF	OFF	95	1

52 English | 624832/02

# 5.3 Technical specifications

For additional specifications, refer to the ventilator Operator's Manual and the Masimo SET product documentation.

Table 5-7. Masimo SET pulse oximeter specifications

Feature	Specification
Mechanical	
Material	Polycarbonate/ABS blend
Circuitry	Microprocessor controlled Automatic self-test when powered on Automatic setting of default parameters Automatic alarm messages Trend data output
Firmware	MX board/circuitry
Environmental	
Operating temperature	0 to 50°C (32°F to 122°F)
Storage temperature	-40°C to 70°C (-40°F to 158°F)
Relative storage humidity	10% to 95%, noncondensing
Operating altitude	Pressure: 500 to 1060 hPa Altitude: -304.5 to 5486 m (-1000 to 18,000 ft)
Configuration settings	
For details about the configuration	on settings, see Table 6-4.
SpO2 alarm delay (s)	0, 5 (default), 10, 15
SpO2 averaging time (s)	2, 4, 8 (default), 10, 12, 14, 16
	When operating in INTELLIVENT-ASV mode with an active PEEP and/or Oxygen controller, this parameter is always set to 16 seconds.
SpO2 sensitivity mode	APOD, Normal (default), Maximum
PVI averaging mode	Normal (default), Fast
FastSat	On, off (default)
Line frequency (Hz)	50 (default), 60

High/low alarms
No Sensor, Sensor Off, Sensor defect, Sensor error
EN 60601-1-2:2007/AC:2014
IEC 60601-1:2006/A1:2012 ANSI/AAMI ES60601-1:2005/(R)2012
Type BF
IP22
Protected against dripping water when the device is tilted to a maximum of 15 degrees
Continuous

Table 5-8. Radiant power specifications for Masimo SpO2 sensors

Radiant power of light, RD SET sensors, at 50 mA, pulsed
≤ 15 mW

Table 5-9. Nominal wavelength specifications for SpO2 sensors<sup>14</sup>

Sensor	LED	Wavelength
RD SET sensors	Red	660 nm
	Infrared	905 nm

<sup>&</sup>lt;sup>14</sup> The wavelength range can provide especially useful information to clinicians.

# Configuration

6.1	Overview	56
6.2	Activating the SpO2 hardware option	56
6.3	Selecting the sensor type	56
6.4	Configuring Nihon Kohden sensor settings	57
6.5	Configuring Masimo SET sensor settings	59

### 6.1 Overview

You can access Configuration mode settings when the ventilator is in Standby. Access requires a configuration code; contact your administrator.

Configuration tasks for setting up a pulse oximeter with your ventilator fall into two categories:

- One-time settings that are specified in Configuration mode (Table 6-1)
- Sensor acquisition settings that can be specified during ventilation (Table 6-2)

Table 6-1. Configuring the ventilator for pulse oximetry, Configuration mode

То	See
Install the communication board	Documentation provided with the communication board or your ventilator  Operator's Manual
Activate the SpO2 hardware option	Section 6.2
Select the sensor type	Section 6.3

Table 6-2. Configuring sensor acquisition settings during ventilation

То	See
Select SpO2 sensor data	options
Nihon Kohden	Section 6.4
Masimo SET	Section 6.5

# 6.2 Activating the SpO2 hardware option

Before you begin, ensure the SpO2 communication board is installed.

### To enable the board

- 1. In the Configuration window, touch Options > HW options.
- 2. Select the SpO2 checkbox. The **Sensors** button appears on the left side of the main Configuration window.

You can now select your sensor type.

# 6.3 Selecting the sensor type

The SpO2 communication board must be enabled for the Sensors button to be available (Section 6.2).

### To select the sensor type

- 1. In the Configuration window, touch Sensors.
- 2. Touch the **Sensor type** tab, if not already selected.
- 3. Touch the appropriate button for your pulse oximeter: Nihon Kohden or Masimo

You can now set the sensor acquisition settings appropriate for your device.

# 6.4 Configuring Nihon Kohden sensor settings

Before proceeding, ensure that:

- The SpO2 hardware option is activated and the sensor type is selected in Configuration.
- SpO2 monitoring is enabled (Section 2.3).

Sensor settings are persistent. Once you change a setting, the selection remains in force until manually changed.


You specify sensor settings in the System > Sensors > SpO2 window.

### To specify sensor data acquisition options

- Touch System > Sensors.
- 2. Touch SpO2.
- 3. Specify the desired settings, as appropriate (Table 6-3).
- 4. To reset any of these options to the factory settings, touch Defaults (available only in Standby).

Configuration is now complete.

Figure 6-1. Sensor data acquisition settings, Nihon Kohden

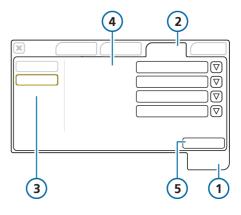

- System
- 4 Data acquisition settings
- Sensors
- 5 Defaults
- 3 SpO2

Table 6-3. SpO2 sensor data settings for Nihon Kohden

Parameter	Description
SpO2 alarm delay (s)	Set in the System > Sensors > SpO2 window.
	Specifies the length of time, in seconds, that the measured SpO2 value must be outside the set alarm limits before the system generates the alarm. For details, see Section 2.6.2. Options are: 0, 5 (default), 10, 15
SpO2 response	Set in the System > Sensors > SpO2 window.
	Specifies the speed at which the sensor sends data to the system.
	Choose options as follows, if other than Normal (the default):
	Normal (default)
	• Slow: Increase response time to prevent frequent alarms
	• Fast: Decrease response time to be alerted to alarm conditions quickly
	• Extra fast: Minimize the response time (this option most closely tracks the reference oxygen saturation)
Pulse detection sensitivity	Set in the System > Sensors > SpO2 window.
	Specifies the sensitivity level of the sensor to detect the pulse.
	Options are:
	Normal (default)
	<ul> <li>Low: Used to lower sensitivity when the pulse oximeter double counts the pulse wave</li> </ul>
	<ul> <li>High: Used to increase sensitivity when the pulse wave amplitude is unstable, for example, due to arrhythmia</li> </ul>
Sensitivity mode <sup>15</sup>	Set in the System > Sensors > SpO2 window.
	Specifies the sensor sensitivity, which can be tailored to different patient conditions.
	Options are:
	Normal (default)
	<ul> <li>Maximum: Used when it is difficult to detect a pulse, for example, with patients with insufficient peripheral circulation or when an intra-aortic balloon pump is used.</li> </ul>

<sup>&</sup>lt;sup>15</sup> If your Nihon Kohden sensor was manufactured prior to 2011, the Sensitivity mode setting may not be displayed.

# 6.5 Configuring Masimo SET sensor settings

Before proceeding, ensure that:

- The SpO2 hardware option is activated and the sensor type is selected in Configuration.
- SpO2 monitoring is enabled (Section 2.3).
- For upgrade information, contact your Hamilton Medical technical representa-

The power line frequency (50 or 60 Hz) for the sensor is specified during device configuration. Additional acquisition settings, such as alarm delay and sensitivity mode, can be changed during ventilation.

Sensor settings are persistent, with one exception: Maximum Sensitivity mode. For details, see Section 6.5.3. Once you change a setting, the new selection is in force until manually changed.

Sensor settings are configured in two places: Configuration mode and in the System > Sensors > SpO2 window.

## 6.5.1 Specifying sensor settings in Configuration mode

### To specify line frequency in Configuration

- 1. In the Configuration > Sensors > SpO2 window, touch the **Settings** tab.
- 2. Set the desired power line frequency: 50 or 60 Hz
  - The rest of the sensor settings are specified outside of Configuration, in the System > Sensors window.
- 3. Touch Back to return to the main Configuration window.

### 6.5.2 Specifying sensor settings during ventilation


You specify sensor settings in the System > Sensors > SpO2 window.

### To configure sensor data acquisition settings

- Touch System > Sensors.
- 2. Touch SpO2.
- 3. Specify the desired settings, as appropriate. See Table 6-4.
- 4. To reset any of these options to the factory settings, touch **Defaults** (available only in Standby).

Configuration is complete and the system is ready for use.

Figure 6-2. Sensor data acquisition settings, Masimo SFT

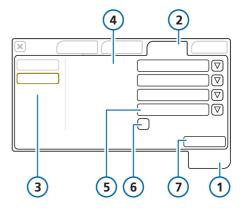

- System
- 5 PVI averaging mode16
- Sensors
- 6 FastSat
- SpO2
- 7 Defaults
- 4 Data acquisition settings

<sup>16</sup> The PVI averaging mode setting is only displayed if the PVI parameter is enabled in the SpO2 adapter. Contact your Hamilton Medical technical representative for details.

Table 6-4. SpO2 sensor data settings for Masimo

Parameter	Description
SpO2 alarm delay (s)	Set in the System > Sensors > SpO2 window.
	Specifies the length of time, in seconds, that the measured SpO2 value must be outside the set alarm limits before the system generates the alarm. For details, see Section 2.6.2.
	Options are: 0, 5 (default), 10, 15
SpO2 averaging time (s)	Set in the System > Sensors > SpO2 window.
	Defines how many SpO2 readings will be used to calculate the final value to display. A higher averaging time provides a more accurate value, but takes longer.
	Options are: 2, 4, 8 (default), 10, 12, 14, 16
	When operating in INTELLIVENT-ASV mode with an active PEEP and/or Oxygen controller, this parameter is always set to 16 seconds.
Sensitivity mode	Set in the System > Sensors > SpO2 window.
	Specifies the sensor sensitivity, which can be tailored to different patient conditions.
	Options are:
	<ul> <li>Normal (default). Appropriate for most patients, provides an optimal combination of measurement sensitivity and respon- siveness to a detached sensor.</li> </ul>
	<ul> <li>Maximum. Recommended for patients with low perfusion for use during procedures, or in high acuity settings where there is frequent clinician/patient contact. Unlike other settings, this option is not persistent. For details, see Section 6.5.3.</li> </ul>
	<ul> <li>APOD (adaptive probe off detection). Protects against incorrect pulse rate and SpO2 readings due to a detached sensor. Not appropriate for patients with low perfusion.</li> </ul>
PVI averaging mode	Set in the System > Sensors > SpO2 window <sup>17</sup> .
	Specifies the time period over which the PVI measurement is averaged.
	Options are:
	<ul> <li>Normal (default). A longer period provides more stable readings over time.</li> </ul>
	• Fast. A shorter period reduces the response time of the device, with higher variability in the measurements.

<sup>&</sup>lt;sup>17</sup> The PVI averaging mode setting is only displayed if the PVI parameter is enabled in the SpO2 adapter. Contact your Hamilton Medical technical representative for details.

Parameter	Description
FastSat	Set in the System > Sensors > SpO2 window.  Provides quicker SpO2 sampling and display. May show more changes in rate, as it is not an averaged value.  Options are: On, Off (default)
Line frequency (Hz)	Set in the Configuration > Sensors > SpO2 > Settings window.  Power line frequency.  Options are: 50 (default), 60

## 6.5.3 About the Maximum Sensitivity mode setting

Unlike other sensor data settings, the Maximum Sensitivity mode setting is not persistent, and may change depending on how the ventilator is set up for a new patient.

When Maximum is already selected, and you start a new patient session:

- If you choose the Last patient option in the Standby window, the Sensitivity mode setting stays at Maximum.
- If you choose a new patient option (Adult/Ped, Neonatal), depending on ventilator model and options), the Sensitivity mode setting changes to the default, Normal, after ventilation is started.

## 6.5.4 Reviewing configured options

Once enabled, Masimo SET pulse oximeter configuration data is displayed in the Configuration > Sensors > Sensor type and Upgrade windows. 18

The Sensor type window shows version number and sensor codes. Note the following:

- If the window shows only dashes (---) for all of the data, an adapter is not connected
- If a parameter is listed as Off, it is not enabled on the adapter.

<sup>&</sup>lt;sup>18</sup> The PVI parameter status is displayed in the Upgrade window, as well as Masimo rainbow SET parameters, if enabled.

### bpm

Beats per minute; also shown as 1/min

### **CPR**

Cardiopulmonary resuscitation

### **Dynamic Lung**

Intelligent panel that graphically represents tidal volume, lung compliance, patient triggering, and resistance in real time

### **ECG**

Electrocardiogram

### **IABP**

Intra-aortic balloon pump

### **NIBP**

Non-Invasive blood pressure

### Plethysmogram

The waveform that visualizes the pulsating blood volume; it is delivered by the pulse oximeter

A	Н		
accuracy of measurements Nihon Kohden 42	High PI alarm about 28		
alarms	specifications 52		
about 25	High pulse alarm		
setting limits 26	about 29		
specifications (Nihon Kohden) 44	specifications 44, 52		
SpO2 alarm delay, about 26	High PVI alarm		
troubleshooting 27	about 28		
	specifications 52		
	High SpO2 alarm		
C	about 29		
communication board, enabling 56	specifications 44, 52		
components			
cleaning 39			
connecting (Masimo) 22	L		
connecting, Nihon Kohden 21	line frequency		
disconnecting (Masimo) 23	about 61		
disconnecting (Nihon Kohden) 22	line frequency, setting 59		
disposing of used 39	Low PI alarm		
Nihon Kohden 19	about 28		
replacing 39	specifications 52		
configuration	Low pulse alarm		
line frequency, setting 59	about 29		
Masimo 59 overview 20, 56	specifications 44, 52 Low PVI alarm		
sensor settings, Masimo 59	about 28		
sensor type, selecting 56	specifications 52		
sensor type, selecting 50	Low SpO2 alarm		
	about 29		
D	specifications 44, 52		
documentation conventions 7			
Dynamic Lung panel	M		
heart and pulse display, about 33			
SpO2 data in 33	main display, viewing low SpO2 limit		
	on 32		
F	maintenance 39		
F	Masimo SET pulse oximetry		
FastSat, about 61	about 19		
	components, connecting 22		
	components, disconnecting 23		
G	line frequency, setting 59 monitored parameters, list of 31		
getting started 20	sensor codes, viewing 61		
Jg == ==	sensor settings, specifying 59		
	specifications 52, 53		
	specifications, monitored para-		
	meters 48		

Maximum Sensitivity mode	S		
about 61 measurements, verifying 24 monitored parameters list of 30, 31 Monitoring window SpO2 data in 32	safety information 10 general 10 maintenance 38 measurements 12 sensor 14 Sensitivity mode, about 58, 60 sensor settings		
Nihon Kohden pulse oximetry about 19 components 19 components, connecting 21 components, disconnecting 22 monitored parameters, list of 30 sensor settings, specifying 57	FastSat 61 Line frequency 61 Pulse detection sensitivity 58 PVI averaging mode 60 Sensitivity mode 58, 60 SpO2 alarm delay 58, 60 SpO2 averaging time 60 SpO2 response 58		
specifications 44 specifications, alarms 44	sensor type, selecting 56 specifications Masimo 52, 53 Nihon Kohden 44 SpO2		
Perfusion index (PI) about 31 specifications 48 Pleth variability index (PVI) about 31 specifications 48	about 30, 31 specifications 42, 48 SpO2 Adapter missing alarm 27 SpO2 alarm delay about 26, 58, 60 setting 59		
plethysmogram, SpO2 data in 33 Pulse specifications 42, 48 Pulse detection sensitivity, about 58 pulse oximeter options, comparison between devices 18 pulse oximetry, overview 18 Pulse rate about 30, 31 PVI averaging mode, about 60	SpO2 averaging time, about 60 SpO2 data, verifying measurements 24 SpO2 data, viewing as MMPs 32 in Dynamic Lung panel 33 in Monitoring window 32 in plethysmogram 33 in trend graph 34 on main display 32 SpO2 Light interference alarm 27		
Q quality index, about 32	SpO2 Low perfusion index alarm 27 SpO2 monitoring, enabling 20 SpO2 Patient disconnected alarm 28 SpO2 Poor signal alarm 27 SpO2 Probe missing alarm 27 SpO2 response, about 58		
	SpO2 Sensor error alarm 28		

66 English | 624832/02

SpO2/FiO2 about 30, 31, 36 specifications 42, 48 SpO2-related alarms. See alarms 25

### T

trends, viewing for monitored parameters 34 troubleshooting issues 27, 34



For more information:

www.hamilton-medical.com













Intelligent Ventilation since 1983

Hamilton Medical AG Via Crusch 8, 7402 Bonaduz, Switzerland **\*** +41 (0)58 610 10 20 info@hamilton-medical.com

www.hamilton-medical.com